




INSTALLATION **INSTRUCTION**

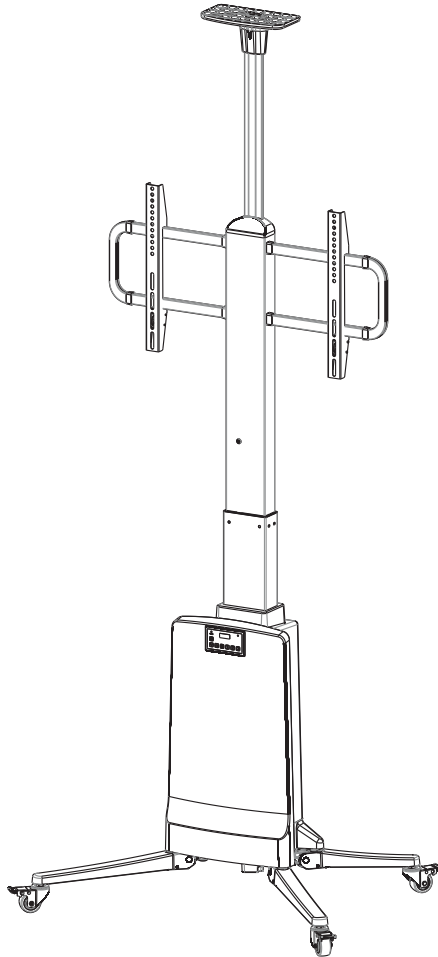

TW85

For Flat Panel & Smart Boards 55" -85"
Versatile Small Size Mobile Cart
Maximum Capacity 150 lbs (68.2 kg)
Video tray max load: 10lbs / 4.5kg
VESA:200x200-600x400mm

Kunshan Hongjie Electronics Co., Ltd

1050, Fu Chun Jiang Road, Economic Development Zone.

Kunshan City, Jiangsu Province, China. 215333

TEL: 86+512-57971777

<http://www.new-nb.com>

FAX: 86+512-57970778

E-mail: info@nbavmount.com

We reserve the right to modify or alter instructions. No modification or alteration without formal notice.

Table of Contents

Table of Contents and Product maximum weight representation 2/14

Warning 3/14

Parts list 4/14

Assembly and Installation

1. Legs to base installation 5/14

2. Cross bar installation 6/14

3. VESA mounting patterns 7/14

4. Mounting rails to TV installation 8/14

5. How to use control panel 9/14

6. Mounting TV on interface 10/14


7. Video tray installation 11/14

8. Wires management 12/14

9. Cautions 13/14

10. Product specifications 14/14

★ Can fit smaller or larger TVs depending upon VESA and TV weight.

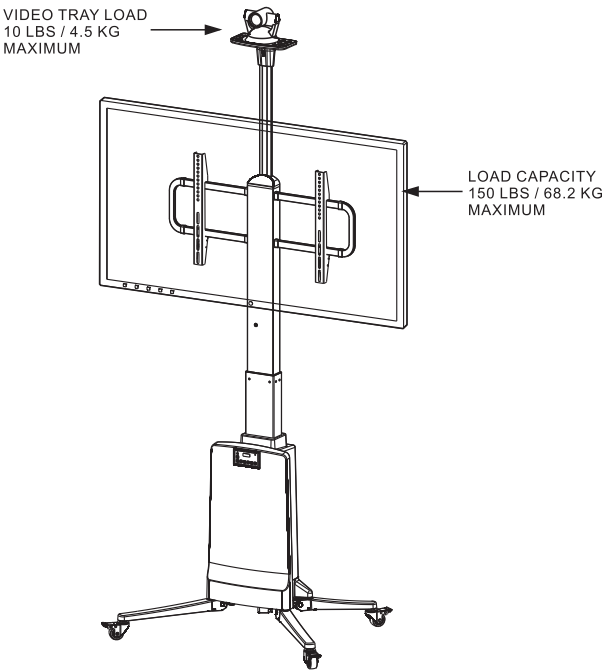

执行标准：Q/320583 AJHJ001-2020 (企业标准)

WARNING!

Severe personal injury and property damage can result from improper installation or assembly. Read the following warning carefully before beginning.

- If you do not understand the instructions or have any concerns or questions, please contact a qualified local installer.
- Do not install or assemble if the product or hardware is damaged or missing, if you require replacement parts, please contact your local distributor for assistance.
- This product fits most 55" - 85" LCD / plasma screen; maximum weight of LCD/plasma screen: 150 lbs/68.2 kg; Video tray max load: 10 lbs/4.5 kg.
- Do not use this product for anything other than the original design.
- This product contains moving parts, please use with caution.
- The manufacturer disclaims any liability for the modifications, improper installation, or installation over the specified weight range. The manufacturer will not be liable for any damages arising out of the use of, or inability to use, the product.
- Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child." or equivalent.
- Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child." or equivalent.
- Use with products heavier than the maximum weights indicated may result in instability causing possible injury.
- All images are for reference, to prevail in product.







ATTENTION!

Des blessures graves et des dommages matériels peuvent résulter d'une mauvaise installation de réunion. Lire l'avertissement suivant attentivement avant de commencer.

- Si vous ne comprenez pas les instructions ou avez des préoccupations ou des questions, s'il vous plaît contacter un installateur local qualifié.
- Ne pas installer ou de montage si le produit ou le matériel est endommagé ou manquant, si vous avez besoin des pièces de rechange, s'il vous plaît contacter votre distributeur local pour l'assistance.
- Ce produit convient à la plupart 55" - 85" écran plasma / LCD; Poids maximum de l'écran LCD / plasma: 150 lbs / 68.2 kg; Vidéo plateau charge maxi: 10 lbs / 4,5 kg.
- Ne pas utiliser ce produit pour autre chose que la conception originale.
- Ce produit contient des pièces en mouvement, s'il vous plaît utiliser avec prudence.
- Le fabricant décline toute responsabilité pour les modifications, une mauvaise installation ou d'une installation sur la gamme de poids spécifié. Le fabricant ne sera pas responsable de tout dommage découlant de l'utilisation ou de l'impossibilité d'utiliser le produit.
- Des blessures graves ou mortelles peuvent survenir lorsque des enfants montent sur des meubles d'équipement audio et / ou vidéo. Une télécommande ou des jouets placés sur l'ameublement peut encourager un enfant à grimper sur l'ameublement et, par conséquent, l'ameublement peut renverser sur l'enfant » ou équivalent.
- Le déplacement de l'équipement audio et / ou vidéo vers des meubles qui ne sont pas spécifiquement conçus pour supporter un équipement audio et / ou vidéo peut entraîner la mort ou des blessures graves du fait que l'ameublement s'est effondré ou tourné sur un enfant.
- L' utilisation des produits produits dépassant le poids maximum indiqué pourrait provoquer une instabilité susceptible de causer des blessures.
- Toutes les images sont à titre de référence, à l'emporter dans le produit.

Manual


							
Tightening Direction	Loosening Direction	Phillips Screwdriver	Metre Rule	Adjustment	By Hand	Hex Wrench	 Tightening  Loosening

 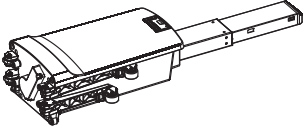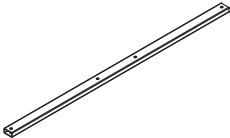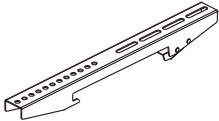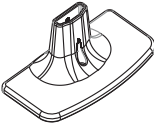 PART LISTS		
A  1X	B  2X	C  2X
D  2X	E  8X	F  1X
G  1X	H  1X	I  1X
HARDWARE KITS		
A1 4X  M8×25mm	B1 4X  M6×25mm	C1 4X  M5×25mm
D1 4X  M4×12mm	E1 4X  Φ16×Φ6.2×1.5mm	F1 4X  Φ15×Φ8.2×10mm


1. Legs to base installation

Step 1

A

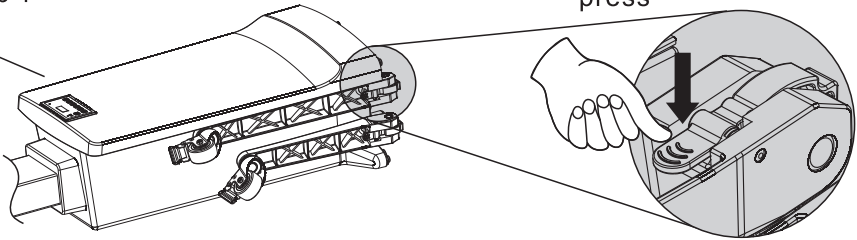


Step 2

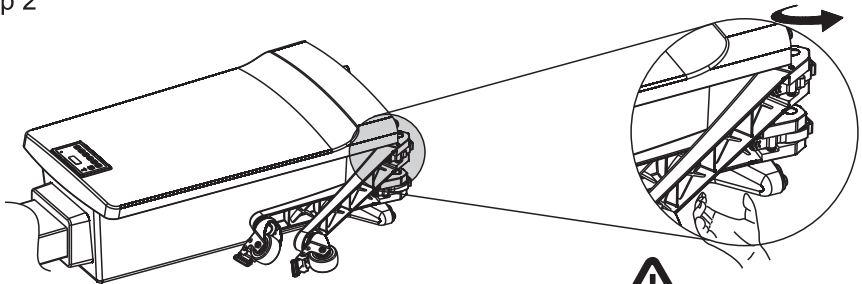


Caution:
Press the buckle, as indicated in step 1,
until the legs are settled in position.

Step 3

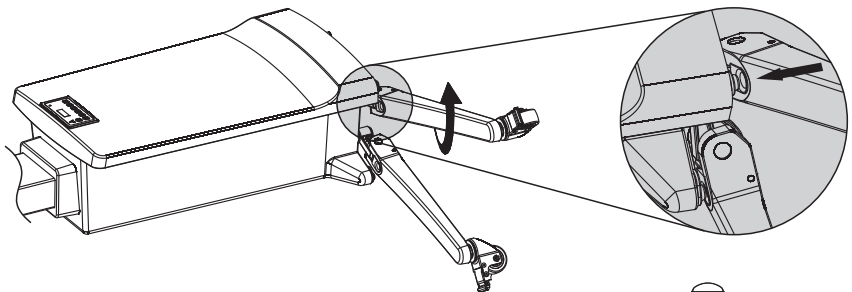


Step 4:

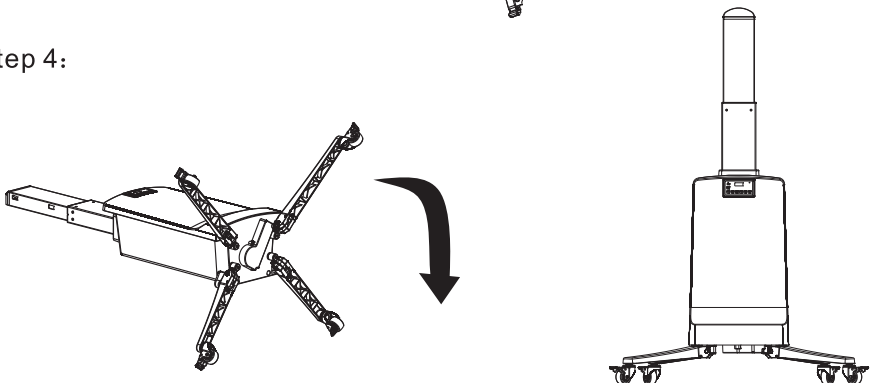


2. Cross bar installation

Step 1

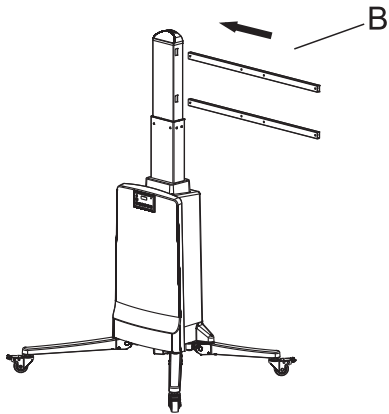


Step 2


Locate crossbars in the middle position

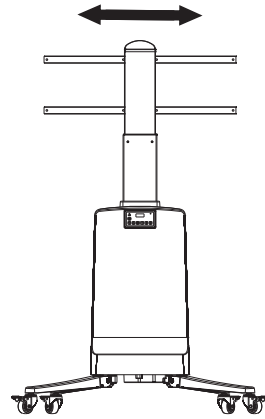



Step 3

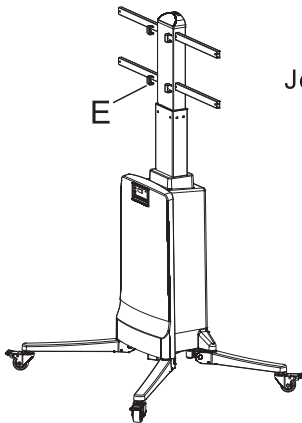

Step 4






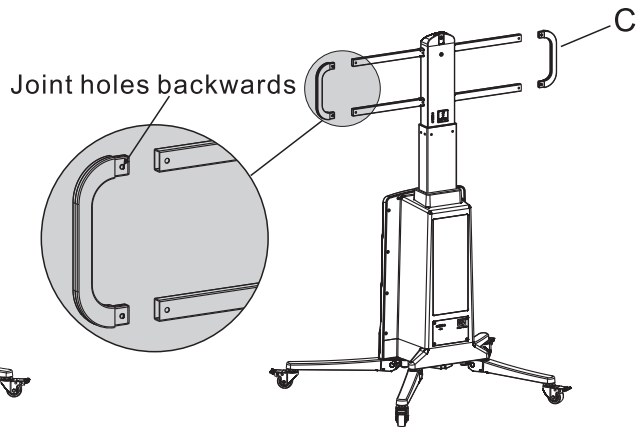


Step 5

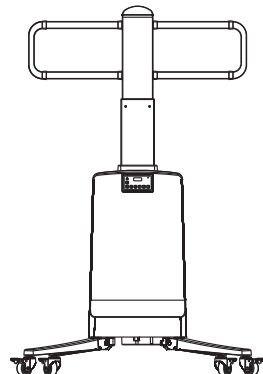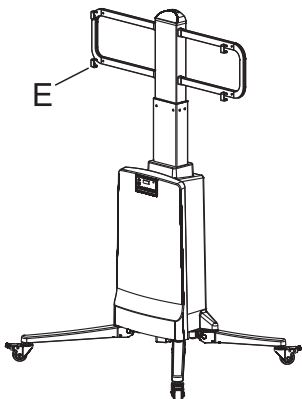


3. VESA mounting patterns


VESA: 200x200~600x400mm

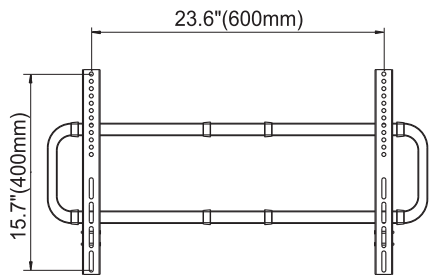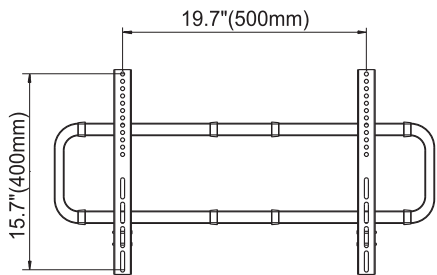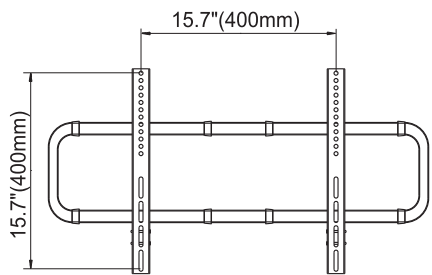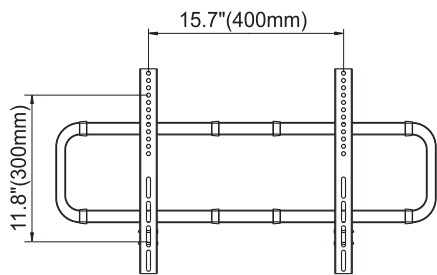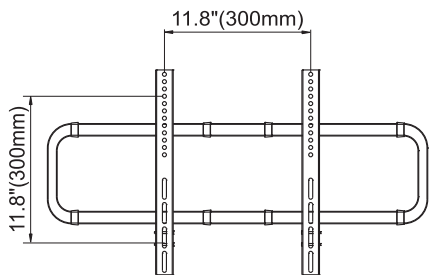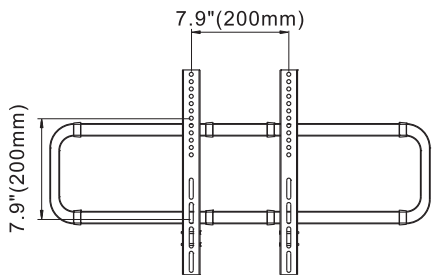

4. Mounting rails to TV installation

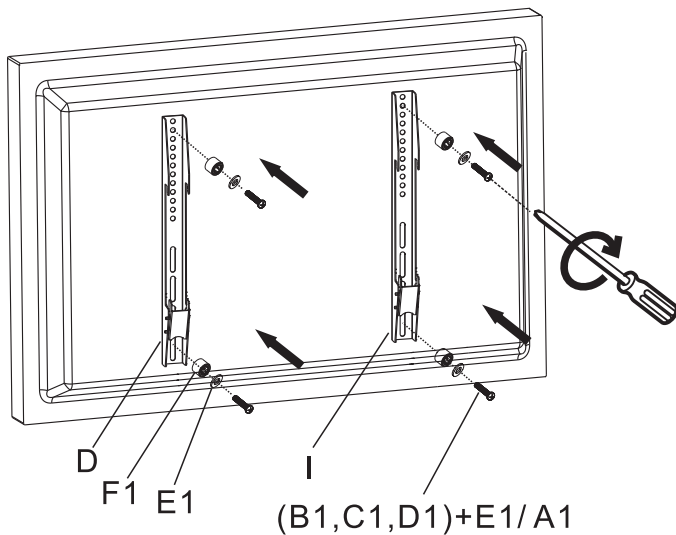


Caution:
Ensure screws
are secured firmly.

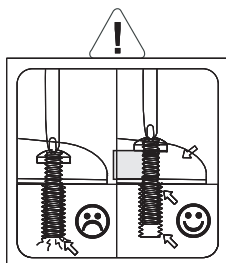


Note:

To avoid damage to TV,
plastic spacers must be used
when depth of mounting holes
are too shallow.


M8×25mm(A1)

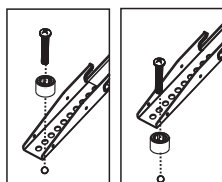

M5×25mm(C1)
M6×25mm(B1)

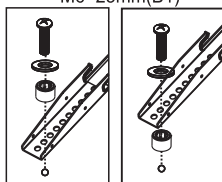

M4×12mm(D1)

 


Safety advise

5.How To Use Control Panel

Control Panel

Height Display

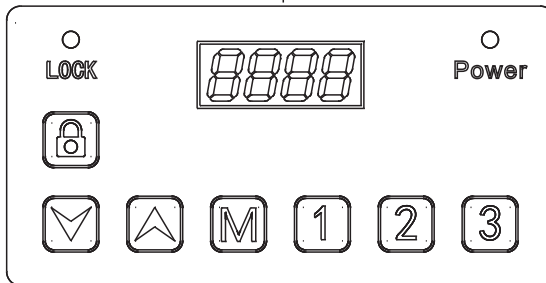

Reminder:

Please initialize the cart before a TV/Display is mounted on. After the current of 110~220V is switched on, long press button M until figure 1650 shown at Height display area, indicating cart can be used properly. (Please refer to Initialize Settings below for more details)

Initialize Settings	Long press button M until "-----" flashes on the display area, indicating the initialization program starts. Cart moves to its highest position when figure 1650 shown at Height display area, and the initialization completes.
Safe Height Setting	A. complete the initialization B. Press button to the proper height (make sure to leave enough height for TV, avoiding conflict when put TV on the cart) C. Mount TV on the cart (Two men are required for this step) D. Short press button M and "-S-" flashes, then long press When "-dn-" flashes on the display area, press , TV moves downwards. Short press button "M" when there is about 10~20mm distance between the bottom edge of TV and the cart edge. The figure displayed at this position is the safe height and the setting is completed.
Memory Setting and use	A. Press button / to the desired height B. Short press button M and "-S-" flashes, then short press button "1", memory setting 1 is done C. Repeat A, B to proceed with the other two digit buttons for memory settings D. Long press the memory button, the cart will automatically move to the height you preset
Child Lock Setting	Lock: Long press , when the Lock light is red, both the control panel and remote control are locked. Unlock: Long press , when the Lock light is green, both the control panel and remote control are unlocked.
Lift Dormancy	When the display is in a dormant state, press any button to make it active.

6. Mounting TV on interface

Step 1


Warning:

Attention: Please make sure the height is suitable for the TV, avoiding conflict with cart




Warning:

Two men are required to mount on TV, holding TV tight by the bottom edge to avoid accident.

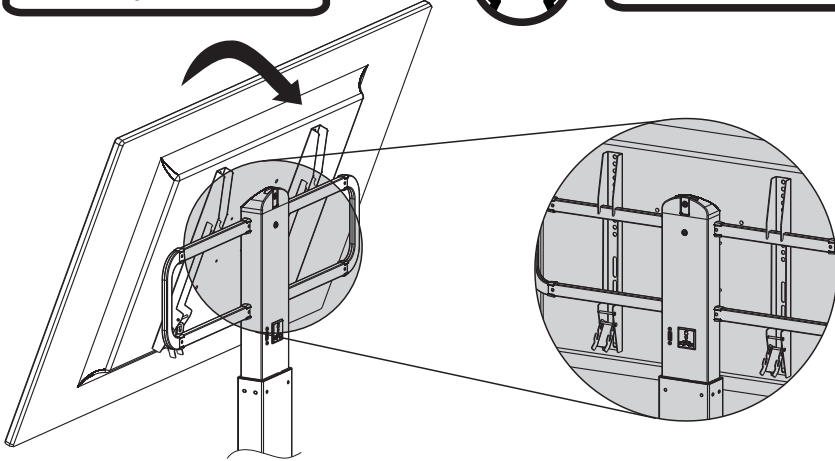


Step 2:

Position TV to center

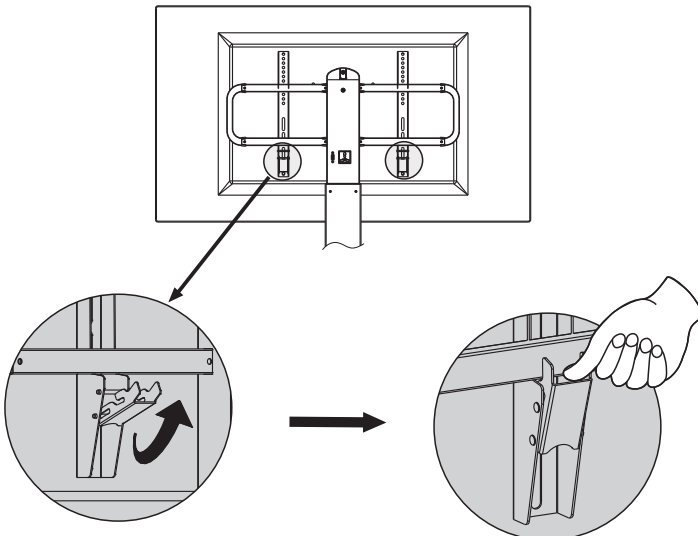


7. Video tray installation


Step 1

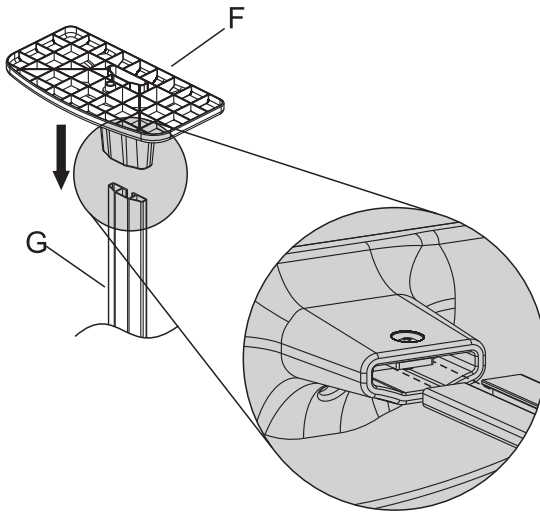

Step 2

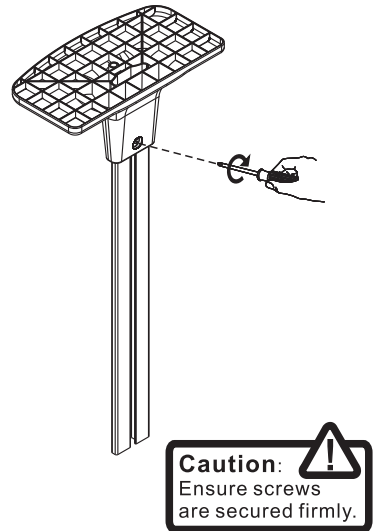


Step 3

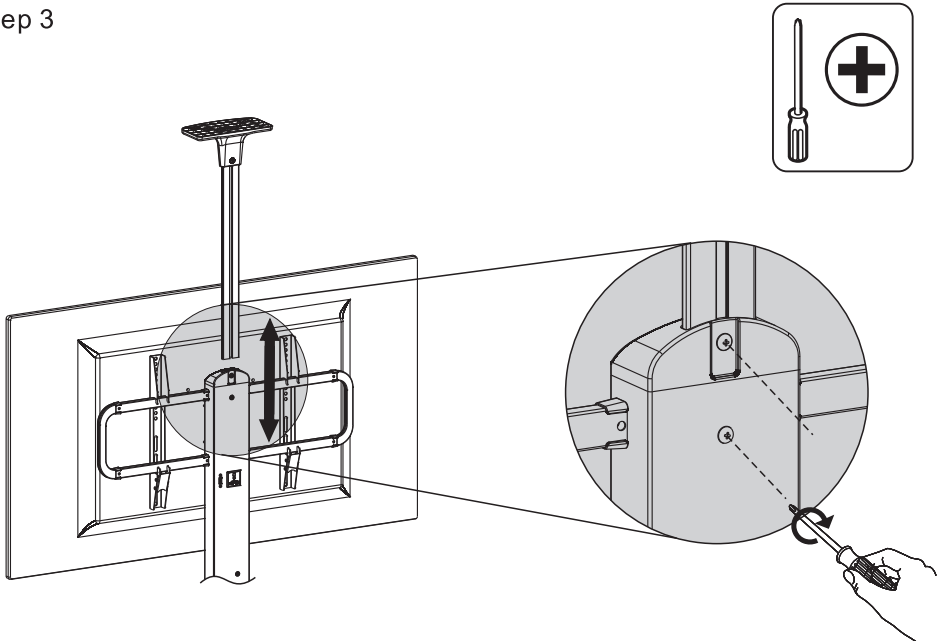


8. Wires management

Step 1

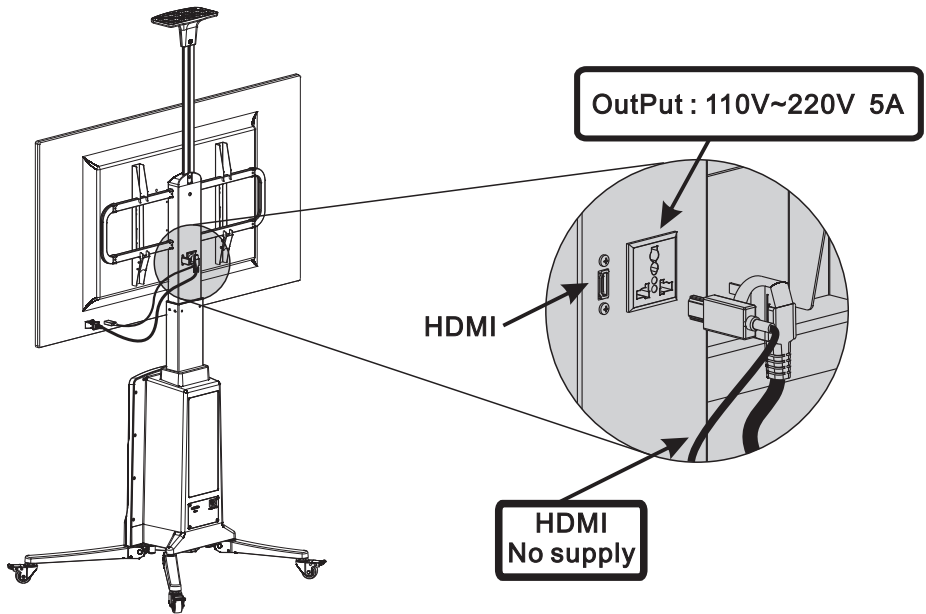

Step 2

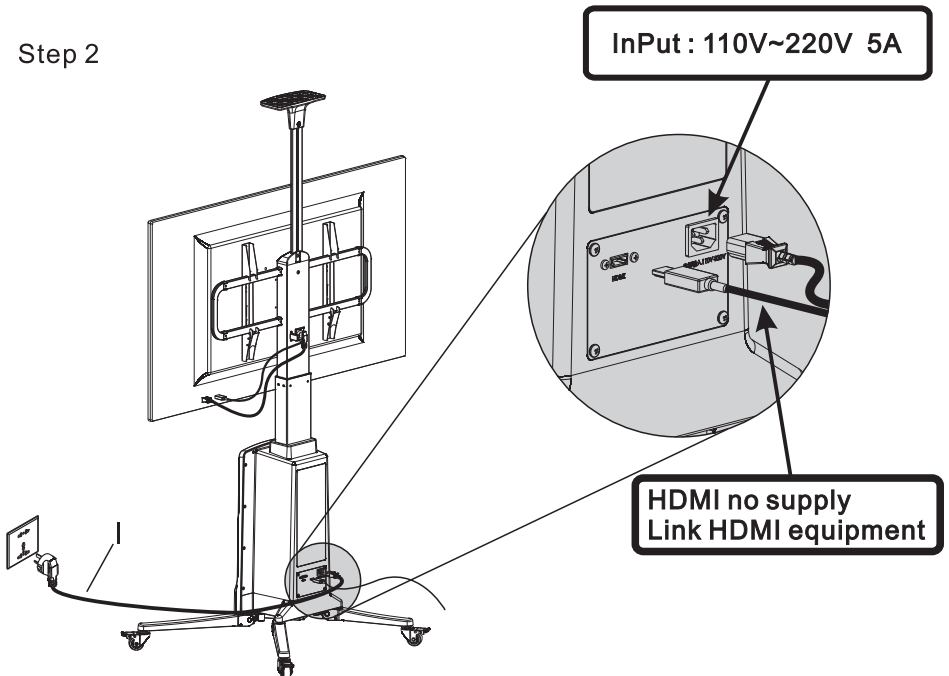

9.Cautions

Pay attention when use

1. Make sure TV weight within 68.2kg (150lbs)
2. Make sure TV mounted in the middle, avoiding any damage or loss caused by uneven loading weight.
3. Cart shall be free of knock when operation.
4. Electric wire should be long enough when moving cart up, avoiding any damage to the wires by over-stretching, in case of accidents like creepage or electric shock.
5. Do not locate cart on inclined or uneven surface, avoiding any damage or loss caused by cart tipping over.
6. Unlock the caster brakes before moving cart. Push and move cart slowly to the specific location. Must lock the caster brakes after move!
7. No use of worn-out wires.
8. Pull out the power plug from socket by holding plug head. It is strictly forbidden to drag wires.

Guidance on Malfunction Code:

When cart works abnormally, there will be a malfunction code flashing on the control panel, indicating you the possible problem. Please take action advised below to solve the problem.

Code	Problem	Action
E01	Insufficient voltage	Check the power supply output voltage
E02	Excess voltage	Check the power supply output voltage
E03	Disconnected electric motor	Disconnected electric motor Check to make sure the motor is connected, or change the wires if need.
E04	Overcurrent in motor	A. Check to see if the motor is short-circuited B. Reduce loading weight C. Return it to manufacturer for maintenance
E05	Overheat motor	A. stop and wait for 15 minutes to cool it B. Power off, then restart
E07	Encounter obstacles	Remove obstacles on the way

10. Product specifications

